

WINDOWS MOBILE DEVICES

OMNITRACS XRS LAW ENFORCEMENT CAB CARD

For Use With XRS Mobile Version 4.40



KEEP THIS CAB CARD WITH THE VEHICLE
AT ALL TIMES. PRESENT TO LAW ENFORCEMENT
PERSONNEL WHEN REQUESTED.



ELECTRONIC LOG CERTIFICATION U.S. DOT FHWA 49 CFR PART 395.15

XRS Corporation certifies that this System satisfies all requirements of the Department of Transportation, Federal Highway Administration, 49 CFR Part 395.15, Driver's Record of Duty Status; Automatic Onboard Recording Devices; Final Rule and Notice of Termination of Exemptions dated April 20, 2003, when maintained in proper working order and when operated as instructed in the manual for this System. XRS Corporation is not responsible for driver entry errors or Systems not maintained in proper working order.

ELECTRONIC LOG CERTIFICATION CANADIAN HOS REGULATIONS

XRS Corporation certifies that this System satisfies all requirements of the Transport Canada's Commercial Vehicle Drivers Hours of Service Regulations when maintained in proper working order and when operated as instructed in the manual for this System. XRS Corporation is not responsible for driver entry errors or systems not maintained in proper working order.

OMNITRACS XRS MOBILE DASHBOARD AND MENU

3-LINE MENU

Select this icon to open the Driver Menu.

SETTINGS

Select to view or change security, display, about, diagnostics, and setup.

DRIVE LEFT

Amount of remaining Drive and Duty time. Red = violation or low remaining time.

STATUS ICONS

Black: connected
Red: connection lost
Gray: connection not yet established.

DUTY LEFT

Amount of remaining Drive and Duty time. Red = violation or low remaining time.

DUTY STATUS

(OFF) Off Duty
(ON) On Duty
(D) Drive
(SB) Sleeper Berth

CYCLE TIME

The countdown of the "weekly" cycle time.

TIME TO VIOLATION

The countdown to the next potential violation.



XRS MOBILE MENU

Select the 3-line Menu  to view the XRS Mobile Menu.

DVIR

Select to perform inspection, certify repairs, or view inspections summary.

HOS

Select to review detailed log information.

MESSAGES


Select to view, send, and delete messages.

SCHEDULE

Select to view scheduled stops.

LOGOUT / CO-DRIVER LOGIN

Select to log out or to log in a co-driver.

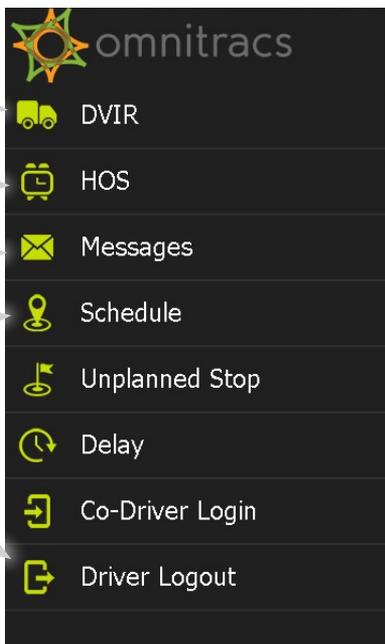

VIEW DRIVER LOGS

STEP 1

Select the 3-line menu icon in the upper left corner of the screen.




STEP 2

Select the HOS item on the menu to view the HOS Log Screen.




STEP 3

Select the Options menu, and then HOS Option.

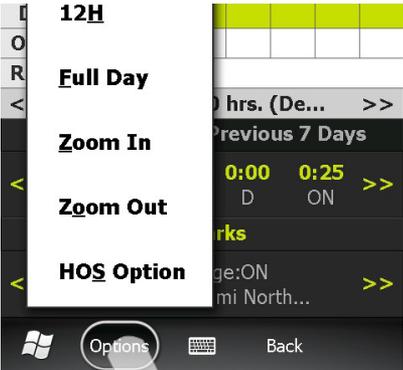

STEP 4

The HOS Menu Screen is displayed. Select View Daily Summary.

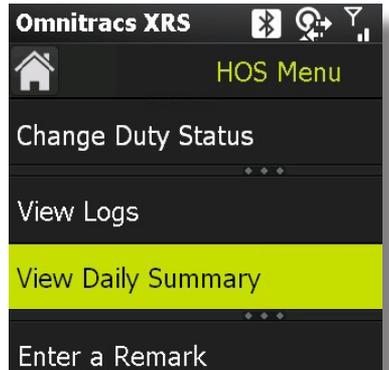

NAVIGATE THE HOS LOG SCREEN

HOME

Select to view the Dashboard.

STATUS BAR

Select left or right arrows to view current Driver, Vehicle, Distance Traveled or Rule Set.

DAILY TOTAL

Select the Daily Total tab to view total ON, OFF, Drive, and Sleeper Berth totals for the selected day.

REMARKS

Displays most recent remark including timestamp and location at time of entry.

MOVE BETWEEN DAYS

Select the arrow icons << and >> to display different days.

HELP

Select the question mark icon to access Omnitracs XRS mobile help.

TIME STATUS


Select left or right arrows to advance or reverse Driver Log timeline view.

OPTIONS

Select to view HOS Options.



OMNITRACS XRS RELAY

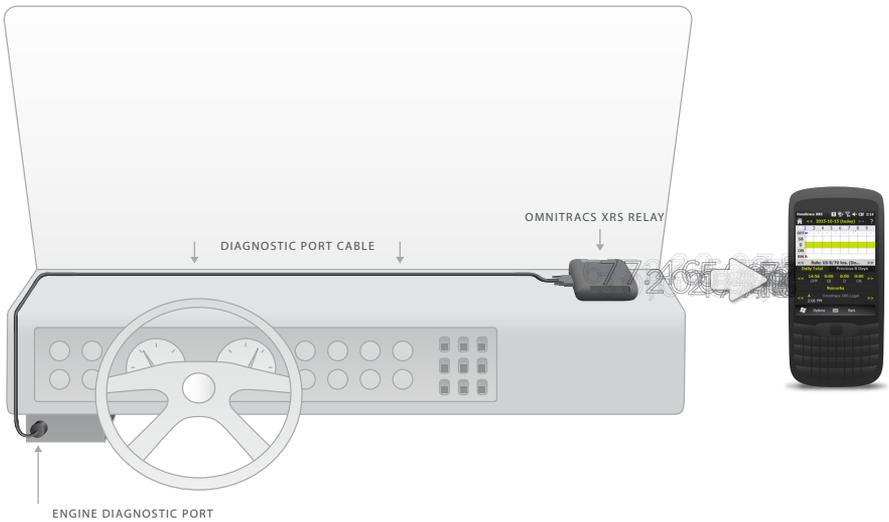

INSTALL

The Omnitracs XRS Relay is installed in the vehicle cab, connected to the engine diagnostic port, and collects vehicle data.

CONNECT

Data is sent from the Omnitracs XRS Relay to the mobile device via wireless connection.

SPECIFICATIONS

395.15 requires synchronization between the vehicle engine and mobile device.

This synchronization occurs via a Bluetooth connection between the mobile device and the vehicle's Omnitracs XRS Relay (onboard computer or OBC).

This connection allows Omnitracs XRS to track the vehicle's miles driven and the driver's HOS.

